

STAR 6 STAR 13



FAMILIARIZATION GUIDE



MACHINE USE FROM THE GROUND CONTROL BOX

N.B.: The Activ'Screen automatically goes into standby if it is not used for an extended period. To switch the Activ'Screen back on, turn the key to OFF position, then follow the start-up procedure.

- 1 Check that the E-Stop buttons from the ground and platform control boxes are not pressed, otherwise pull them out.



- 2 Ground control box: turn the key to the ground control position.



- 3 Mast extension/retraction: press the enable switch and the various movement controls to perform the machine's movements.



Press and hold down the enable switch to perform the different movements. Releasing the enable switch will stop the movements.

- 5 Power OFF: from the ground control box, turn the key to the 0 position.



EMERGENCY STOP


Push the Emergency Stop button to immediately stop all movements of the machine.



RESCUE AN OPERATOR

Use the ground controls **1 2 3** to lower the platform to the ground.

If the ground controls are not functional, press and hold the push button (1) in front of the machine, to lower the platform.

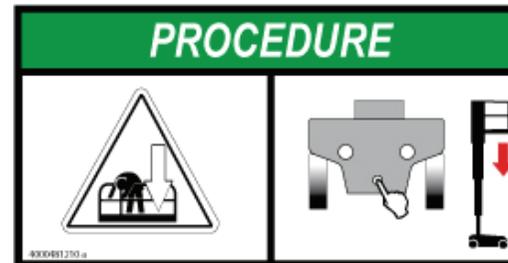

HAULOTTE ACTIV'SCREEN



Mast extension



Mast retraction



Enable Switch



Navigate up



Navigate down



Cancel a selection



Validate a selection in the menu



Machine fault indicator



Overload indicator

! This is only a familiarization guide. It is mandatory to read the operator manual, do a worksite risk assessment to verify the suitability of the machine for the work to be performed in relation to the site and to carry out the inspection of the machine before use.

STAR 6 STAR 13



FAMILIARIZATION GUIDE



! This is only a familiarization guide. It is mandatory to read the operator manual, do a worksite risk assessment to verify the suitability of the machine for the work to be performed in relation to the site and to carry out the inspection of the machine before use.

MACHINE USE FROM THE PLATFORM CONTROL BOX

N.B.: The Activ'Screen automatically goes into standby if it is not used for an extended period. To switch the Activ'Screen back on, press the emergency stop button then follow the start-up procedure.

- 1 Check that the E-Stop buttons from the ground and platform control boxes are not pressed, otherwise pull them out.



- 2 Ground control box: turn the key to the platform control position.



- 3 Driving, Lifting: push the selector to the right to activate drive or to the left to operate mast extension/retraction. Press the joystick trigger (2) and move the joystick in the desired direction.



- 4 Steering: press the steering button (steering rocker) (1) in the desired direction.
All movements: press the joystick trigger (2) and move the joystick in the desired direction.



- 5 Power OFF: from the ground control box, turn the key to the 0 position.





EMERGENCY STOP

Push the Emergency Stop button to immediately stop all movements of the machine.



EXTENSION DECK (IF MACHINE EQUIPPED)

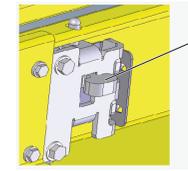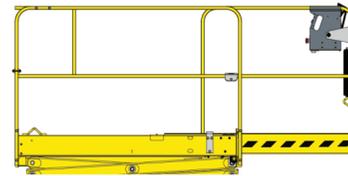

Make sure that the extension deck is in locked position.

Press the pedal (1) to release the extension deck lock pin.

With pedal (1) pressed, push the extension deck guard rails to the extended position.

To retract the extension deck, press pedal and pull the extension deck rails inwards to the locked position. Release the pedal.

INFORMATION - INDICATORS



Horn



Battery charge indicator:



Batteries charged



Flashing: 40% charge remaining



Constantly lit: 20% charge remaining
Recharge the batteries



Machine fault indicator



Platform overload indicator



Tilt indicator